

Clarke CFP Pro 20" Buffer

Before use:

Pads: Make sure that you have the correct pads for your job. We sell a variety of different pads for all types of cleaning, and stripping. Machine uses a 20" pad, or brush.

Brush: We have a brush for a \$19.00 Rental fee that will work great for cleaning tile, and uneven floors.

Operation:

Plug in machine: Plug machine in to an outlet that nothing else is plugged into, do not plug into an extension cord.

Handle Adjustment: At the bottom of handle is a lever to adjust the handle to your desired comfort.

Pad: Put your desired pad on the machine. Red pad must be used as a spacer pad, if using a more aggressive pad.

Pad driver/Brush attachment: Make sure that the attachment is installed on machine. To install tilt machine back, put pad driver/brush on the bottom of machine and rotate to lock in.

Get to work: When all above is done and you are ready to start push red button and pull levers. Operate machine in a back-and-forth motion.

After use:

Clean Machine: Please wipe down the cord, and the base of the machine.

Pad: Remove pad driver during transportation especially if there is no pad on it. Do not put pad driver on ground with out a pad.

Thank you for renting from Bell Janitorial Supply, we look forward to renting to you again!!